## **PRODUCT INFORMATION**

FIRED EARTH

Bathrooms;

Aurea Slipper Bath 1590x700x800 AUREABATH



Description	Fired Earth Product Code
1590mm Slipper Bath	AUREABATH
Complete with Chrome Clicker Waste	
**NO OVERFLOW**	

# **COMPLEMENTARY PRODUCTS**

Description	Fired Earth Product Code
Wall Mounted or Freestanding Taps	Various

Bathrooms;

Aurea Slipper Bath 1590x700x800 AUREABATH

#### **FEATURES AND BENEFITS**

- A 1590mm double skinned Acrylic contemporary Slipper bath with drawn Acrylic outer panel seamlessly joined.
- Because of the thin rim there is a surprising amount of internal space in this bath.
- Very comfortable to lie in for maximum relaxation.
- Hard wearing, luxurious and practical.
- Hygienic, with good thermal properties.
- Most everyday marks or scratches can be repaired to restore the bath to its original smooth, hygienic integrity.
- Hand polished gloss finish.
- Taps should be wall mounted or floor mounted on leg(s)
- Available in the following finishes: White exterior and interior.

Bathrooms;

# Aurea Slipper Bath 1590x700x800 AUREABATH

#### **FAQs**

Q: How thick are the walls of the bath?

**A:** Both skins are manufactured from 5mm Acrylic sheet. There is a small gap between the inner and outer panel.

**Q:** What is the internal depth of the bath?

A: 490mm at the lower end.

**Q:** What is the normal water capacity of the bath?

A: 195Ltrs approximately. (125Ltrs allowing for average 70 kilo person)

**Q:** What is the weight of the bath when empty?

**A:** 44Kgs approximately.

**Q:** What is the weight of the bath when full of water?

**A:** 239Kgs approximately. (NB: It is unusual to completely fill a bath with water, please bear in mind that a person getting into a bath will displace approximately one litre of water for each kilo that they weigh)

**Q:** What characteristics are normal to these Acrylic baths?

**A:** The bath material absorbs the ambient temperature of the room so it is warm to the touch and you can enjoy a longer bathing experience.


Q: Can I fit different wastes to the bath?


**A:** No. The bath comes fitted complete with a Chrome plated 'clicker' bath waste. Please note there is NO OVERFLOW on this bath.

Bathrooms;

Aurea Slipper Bath 1590x700x800 AUREABATH

# **DIMENSIONAL DRAWING.**

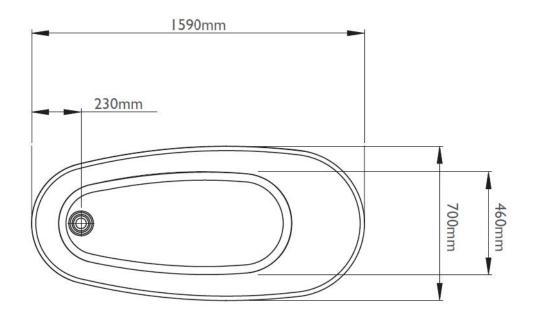

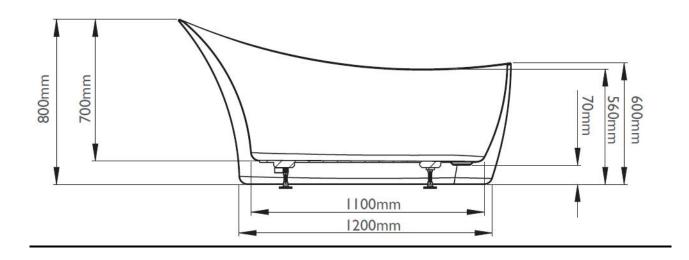

Bathrooms;

Aurea Slipper Bath 1590x700x800 AUREABATH

#### **INSTALLATION GUIDELINES**

- The installation of the bath will be seen as an acceptance of quality.
- Please ensure you thoroughly inspect the bath inside and outside upon delivery.
- It is recommended that a qualified plumber be used to install the bath.
- We will **not** take any responsibility for incorrect installations.
- We do not give any advice on DIY installations.
- We strongly recommend that all protective packaging remains on the bath until all refurbishments are completed.
- The waste hole sits approximately 70mm above the finished floor level. \*Allowance should be made for this during installation of the waste pipe work. We recommend that the trap and outlet should exit below the floor level.
- All waste pipework should be in place within the floor before the bath is installed.

#### SUGGESTED INSTALLATION METHOD

- 1. Position the bath in the desired location and mark the position of the waste outlet on the floor.
- 2. Remove the bath and install waste pipework within the floor to a position below the bath and close enough to the marked position, ensuring enough room is allowed to position the trap and a flexible waste connector pipe ( NOT supplied ) between the waste pipe and waste outlet. It may be necessary for the bottom of the trap to sit below the finished floor level, allowance should be made at this stage
- 3. Prepare the bath for installation by fitting the waste trap and a flexible outlet connector. (NOT supplied)
- 4. Replace the bath into position. Raising the bath off the floor on blocks of wood (Not supplied) to allow room for the connection of the flexible connector to the waste pipe.
- 5. Test all connections for any signs of leaks.
- 6. Remove the blocks of wood and carefully lower the bath into position.
- 7. Use the adjustable bath feet to get a stable settlement on to the floor.
- 8. Apply a thin layer of clear mastic all around the base of the bath to seal against the floor and allow to set before using the bath.

Bathrooms;

Aurea Slipper Bath 1590x700x800 AUREABATH

#### CARE AND CLEANING INSTRUCTIONS.

#### Care

Fine scratches can be removed with a damp cloth and a mild cleaner such as Cif active cream.

Limescale can be removed with vinegar. Rinse several times with warm water and dry with a soft cloth.

For everyday cleaning just use a mild cream cleaner such as Cif. Do not use abrasive cleaners as they will remove the gloss finish. Should you need to restore the gloss use the automotive Q3 or T-Cut, polishing in circular motions.

Deeper scratches may require a more abrasive paper to be used initially. If this is the case work your way up to 1500-2000 grit gradually and re-polish. For best results limit sanding to the smallest possible area around the scratch. It may be possible to polish very fine scratches away without using abrasive papers: scrubbing gently with a soft brush or plastic pad (not metal scouring pad) and a mild cream cleaner. Afterwards scrub the whole area with plenty of clean water and re-polish as before.

#### **Cleaning Your Bath**

We recommend a non-abrasive bathroom or kitchen household cleaner. Abrasives will cause the disappearance of the glossy look over a long period. Should you need to clean the bath with an abrasive cleaner, as may be required from time to time, polishing with a car polish or household metal polish will restore the baths' lustre.

Bathrooms;

Aurea Slipper Bath 1590x700x800 AUREABATH

### Types of Bath Waste which can be fitted to this bath.

Chrome clicker waste included.

## **WAREHOUSE LONG DESCRIPTION**

#### **Packaging**

Weight 44Kg

No. boxes per product code 1

Dimensions of outers 1650 x 800 x 900mm

**FIRED EARTH** 

**AUREABATH**