

PRODUCT INFORMATION

FIRED EARTH

Bathrooms;

Normandie Bath
Back to Wall Bath 1640x760x590
NORMBATH



Description	Fired Earth Product Code
1640 mm Normandie back to wall bath.	NORMBATH

COMPLEMENTARY PRODUCTS

Description	Fired Earth Product Code
Deck Mounted or Wall Mounted or Freestanding Taps	Various

PRODUCT INFORMATION

FIRED EARTH

Bathrooms;

Normandie Bath
Back to Wall Bath 1640x760x590
NORMBATH

FEATURES AND BENEFITS

- A double skinned Acrylic bath with drawn Acrylic outer panel seamlessly joined.
- Slightly slimmer front rim to get maximum bathing area in a smaller bath
- Hard wearing, luxurious and practical.
- Hygienic, with good thermal properties.
- Most everyday marks or scratches can be repaired to restore the bath to its original smooth, hygienic integrity.
- Hand polished finish.
- Specifically designed for user comfort.
- Available in the following finishes: White exterior and interior.
- Taps can be mounted on the centre of the rear rim of the bath, the customers installers have to drill the tap holes on site.
- Specially designed rear panel moulded to the bath to allow a number of different bath wastes to be fitted.

Bathrooms;

Normandie Bath
Back to Wall Bath 1640x760x590
NORMBATH

FAQs

Q: How thick are the walls of the bath?

A: Both skins are manufactured from 5mm Acrylic sheet

Q: What is the internal depth of the bath?

A: 450mm at the shallowest point.

Q: What is the normal water capacity of the bath?

A: 200Ltrs approximately. (130Ltrs allowing for average 70 kilo person)

Q: What is the weight of the bath when empty?

A: 45Kgs approximately.

Q: What is the weight of the bath when full of water?

A: 245Kgs approximately. (NB: It is unusual to completely fill a bath with water, please bear in mind that a person getting into a bath will displace approximately one litre of water for each kilo that they weigh)

Q: What characteristics are normal to these Acrylic baths?

A: The colour is throughout the bath material and absorbs the ambient temperature of the room so it is warm to the touch and you can enjoy a longer than normal bathing experience.

Q: What waste do I need for the bath?

A: Clicker waste (CLIBATHWASCP) or Combined clicker waste and filler (CLIWASTEFILLCP) are suitable. Please check the dimensional drawings before ordering waste outlets.

Q: Can the bath be drilled to fit deck mounted taps?

A: Yes, please follow the instruction sheet carefully.


PRODUCT INFORMATION

FIRED EARTH

Bathrooms;

Normandie Bath
Back to Wall Bath 1640x760x590
NORMBATH

DIMENSIONAL DRAWING.

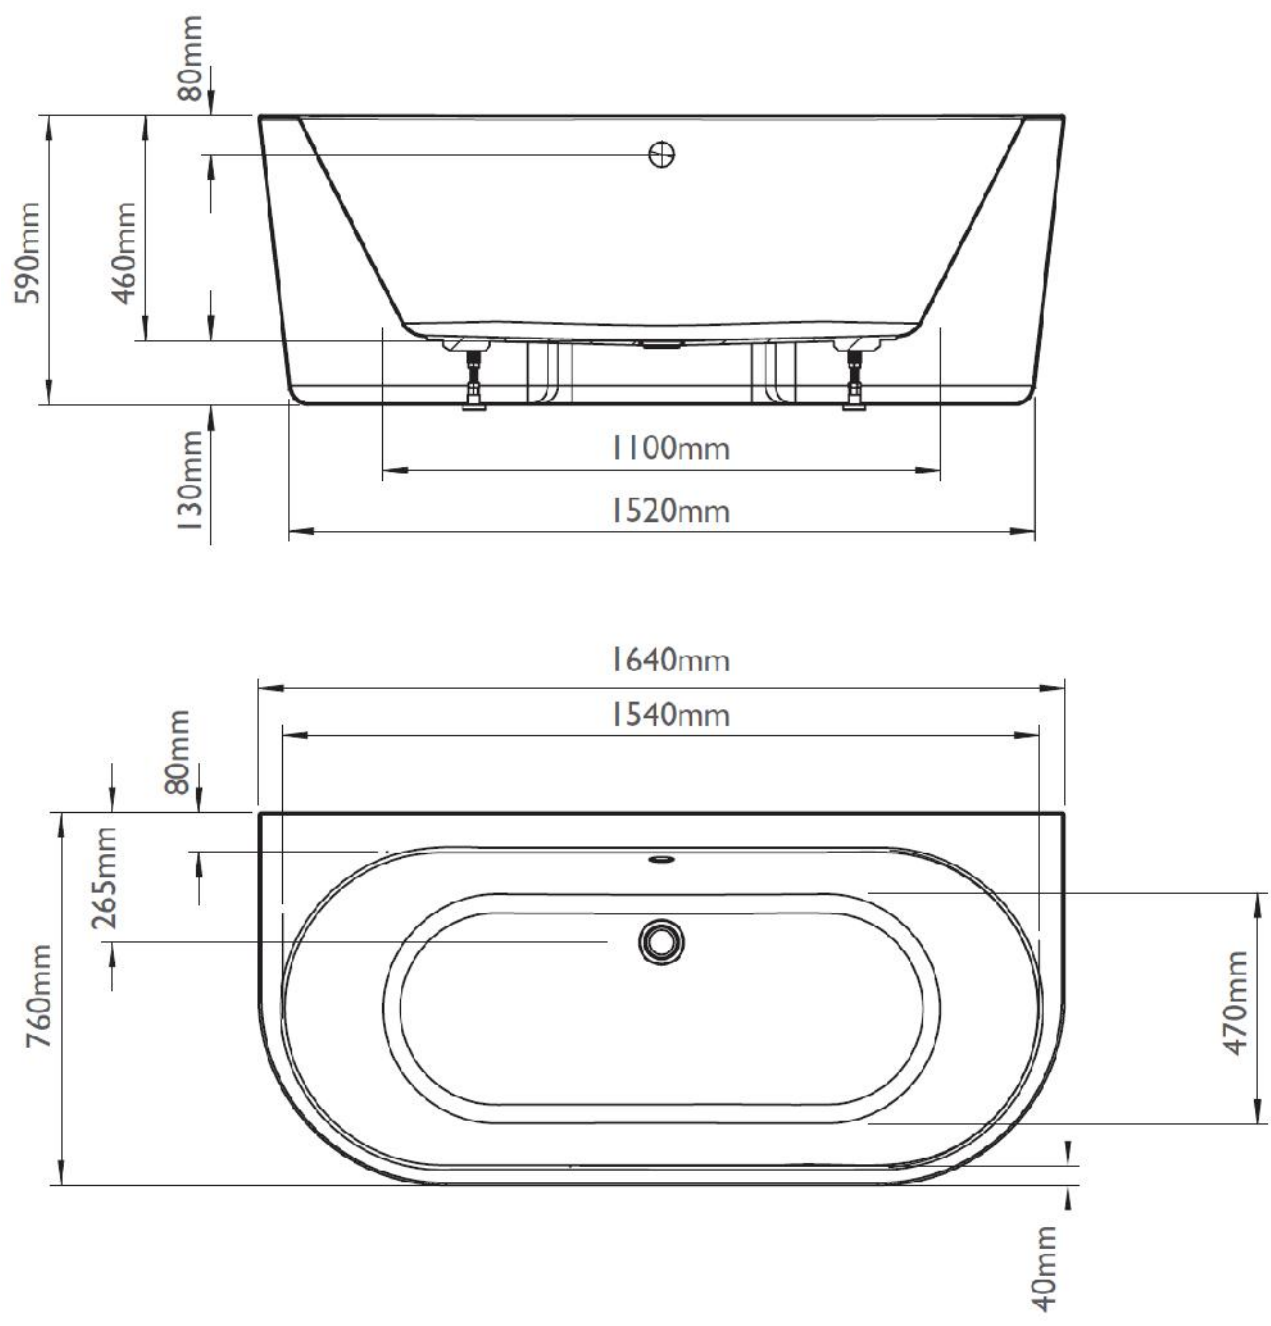

PRODUCT INFORMATION

FIRED EARTH

Bathrooms;

Normandie Bath
Back to Wall Bath 1640x760x590
NORMBATH

INSTALLATION GUIDELINES

- The installation of the bath will be seen as an acceptance of quality.
- Please ensure you thoroughly inspect the bath inside and outside upon delivery.
- It is recommended that a qualified plumber be used to install the bath.
- We will **not** take any responsibility for incorrect installations.
- We do not give any advice on DIY installations.
- We strongly recommend that all protective packaging remains on the bath until all refurbishments are completed.
- The waste hole sits approximately 130mm above the finished floor level. *Allowance should be made for this during installation of the waste pipe work. We recommend that the trap and outlet should exit below the floor level, but shallow bath traps can be used if waste exit is above the floor level.
- All waste pipework should be in place within the floor before the bath is installed.

SUGGESTED INSTALLATION METHOD

1. Position the bath in the desired location and mark the position of the waste outlet on the floor.
2. Remove the bath and install waste pipework within the floor to a position below the bath and close enough to the marked position, ensuring enough room is allowed to position the trap and a flexible connector (NOT supplied) between the waste pipe and waste outlet. It may be necessary for the bottom of the trap to sit below the finished floor level; allowance should be made at this stage.
3. Prepare the bath for installation by fitting the overflow, waste trap and flexible connector. Fit the deck mounted taps, if applicable, and pre-plumb as required.
4. Replace the bath into position. Raising the bath off the floor on blocks of wood (Not supplied) to allow room for the connection of the flexible connector to the waste pipe. Connect hot and cold supplies, using flexible connections.
5. Test all connections for any signs of leaks.
6. Remove the blocks of wood and carefully lower the bath into position.
7. Use the adjustable bath feet to get a stable settlement on to the floor
8. Apply a thin layer of clear mastic all around the base of the bath to seal against the floor, wall and allow to set before using the bath

PRODUCT INFORMATION

FIRED EARTH

Bathrooms;

Normandie Bath
Back to Wall Bath 1640x760x590
NORMBATH

CARE AND CLEANING INSTRUCTIONS.

Care

Fine scratches can be removed with a damp cloth and a mild cleaner such as Cif active cream.

Limescale can be removed with vinegar. Rinse several times with warm water and dry with a soft cloth.

For everyday cleaning just use a mild cream cleaner such as Cif. Do not use abrasive cleaners as they will remove the gloss finish. Should you need to restore the gloss use the automotive Q3 or T-Cut, polishing in circular motions.

Deeper scratches may require a more abrasive paper to be used initially. If this is the case work your way up to 1500 grit gradually and re-polish. For best results limit sanding to the smallest possible area around the scratch. It may be possible to polish very fine scratches away without using abrasive papers: scrubbing gently with a soft brush or plastic pad (not metal scouring pad) and a mild cream cleaner. Afterwards scrub the whole area with plenty of clean water and re-polish as before.

Cleaning Your Bath

We recommend a non-abrasive bathroom or kitchen household cleaner. Abrasives will cause the disappearance of the glossy look over a long period. Should you need to clean the bath with an abrasive cleaner, as may be required from time to time, polishing with a car polish or household metal polish will restore the baths' lustre.

Bathrooms;

Normandie Bath
Back to Wall Bath 1640x760x590
NORMBATH

INSTRUCTIONS ON HOW TO DRILL CUSTOM TAP HOLES


Please read these instructions carefully. We strongly recommend that you use a qualified plumber to install the bath and the taps. Failure to adhere to these instructions will invalidate the manufacturers guarantee and no responsibility will be accepted for any loss of damage.

The drilling of the tap holes will be seen as an acceptance of quality.

You are able to drill the Normandie bath tap ledge with standard drill bits and hole saws.

All baths are delivered with no tap holes drilled. The waste and overflow holes are pre-drilled for ease of installation.

- Keep the protective cover sheet over the entire bath to protect the bath during installation.
- Locate the centre of the tap ledge, use the centre of the overflow hole as a reference. Mark this line on the tap ledge with a pencil. Ensure the tap is located on the flat area of the ledge of the bath and that there is sufficient space beneath the rim to tighten the locking nuts. Some taps give little room for error.
- Mark the centre to centre dimensions of your taps with a pencil line as indicated in the following photograph. Most taps come with a technical drawing showing the centre to centre dimensions.
- Double check your measurements by placing the taps over the marks before you start drilling.
- Drill holes in the rim at each of the marks, using a sharp hole saw with a centre bit. Align the drill with the markings and gently start drilling through the bath, keep the drill speed moderately slow and apply just enough power to keep the hole saw cutting at an even rate. Allow the sharp saw to carry the downward force without exerting too much pressure.
- Remove any burrs with very light sandpaper.

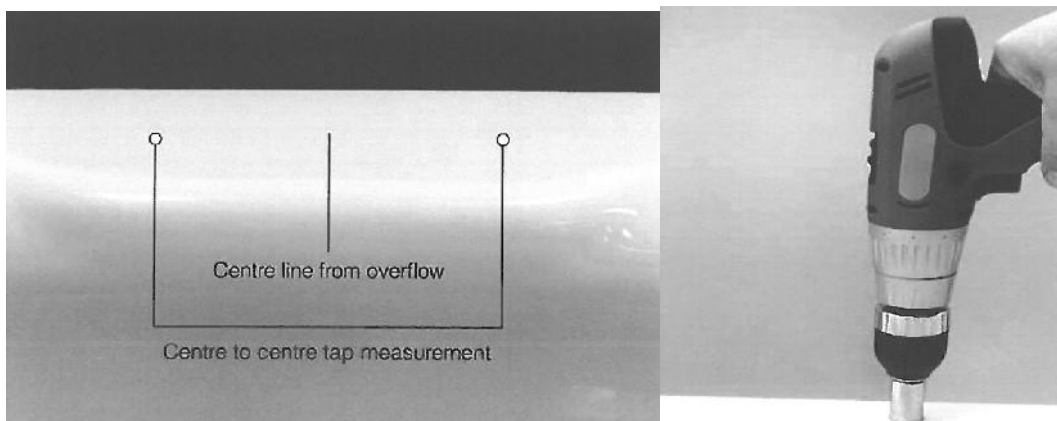

PRODUCT INFORMATION

FIRED EARTH

Bathrooms;

Normandie Bath
Back to Wall Bath 1640x760x590
NORMBATH

WASTE NOT INCLUDED WITH BATH

Types of Bath Waste which can be fitted to this bath

Item	Description	
A	Clicker Waste CLIBATHWASCP	
B	Combined waste and filler CLIWASTEFILLCP	

WAREHOUSE LONG DESCRIPTION

Packaging

Weight 45Kg

No. boxes per product code

Dimensions of outers 1700 x 800 x 600mm

FIRED EARTH
NORMBATH