# **PRODUCT INFORMATION**

# **FIRED EARTH**

Bathrooms Leila Roberts

#### **Atlantic Cabinet**



#### **Product Code**

ATLCAB(colour)

## **Features and Benefits**

- Elegant Art Deco design featuring panelled doors.
- May be installed with or without legs as floor standing or wall mounted.
- Luxurious metal detail in high quality electroplated brass. Choice of Chrome, Polished Nickel or Antique Gold finishes.
- Solid wood construction
- Available in choice of five cabinetry colours two wood finishes and three handpainted colours:

Wenge (shown) Oak

White (Matt finish) Eau de Nil (Gloss finish)

Steel Grey (Matt finish)

- Manufactured in the UK.
- Every piece rigorously inspected at every stage of the manufacturing process.

#### FAQ's

- (Q) Is it simple to install?
  - (A) Yes but we always suggest that a professional installer is used.
- (Q) Is it supplied with any fixings?
  - (A) No fittings are supplied with the cabinet. We recommend using an appropriate fixing method, depending on the wall that the cabinet is being fixed against.
- (Q) How do I clean and maintain the product?
  - (A) Refer to maintenance section.

#### **Product Information**

Analysis code 1: PBAT Available from: August 2014


**Ordering process:** Available to special order. Check PU for current lead times.

The up to date version (controlled document) is on the Fired Earth intranet. Always check any printed version before use.

Product Manual: Atlantic Washstand - Glass Legs

# **Atlantic Cabinet**


# **Dimensional Drawing**

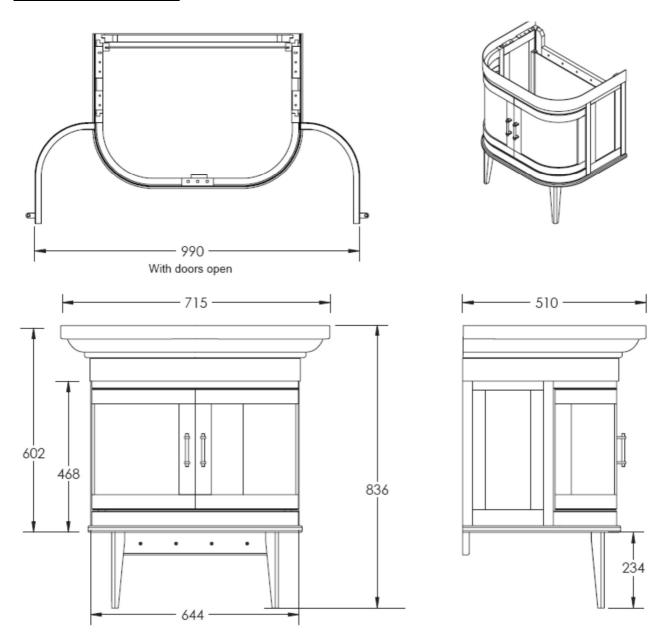

**UNIT CAN BE FITTED WITH OR WITHOUT LEGS** 

# **Atlantic Cabinet**

# **Pack Contents**

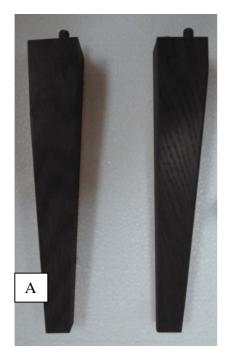





# FIRED EARTH

General installation instructions for Atlantic wall hung vanity unit





Item	Description	Qty			
Α	Legs for the Unit	2			
В	Unit	1			
С	Installation Instruction	1			

		$\frown$		CT	- 1	N I	_/	$\sim$ F	3 R /		_	$\sim$	N I
$oldsymbol{-}$	ĸ	L 1		( <sub>-</sub> I		N	-(	) F	< IV	ΙД		( )	N

FIRED EARTH

Bathrooms Leila Roberts

**Atlantic Cabinet** 

**Maintenance/Care Instructions** 

**SEE INSTALLATION INSTRUCTIONS** 

**Atlantic Cabinet** 


# **Assembly and Installation Instructions**

INSTRUCT110 REV140730 A/MM

# FIRED EARTH

General installation instructions for Atlantic wall hung vanity unit



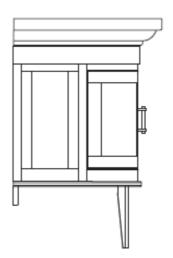


# Important Information:

Please check the products for transport damage and that contents are complete before installation.

Consult a qualified plumber if you have any problems installing this product. Complaints made following installation regarding the above cannot be accepted.

The up to date version (controlled document) is on the Fired Earth intranet. Always check any printed version before use.

# **Atlantic Cabinet**

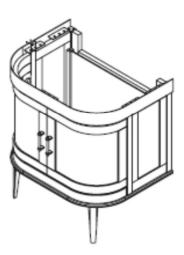

Thank you for purchasing this product. Please take a moment to review this manual before you install your product. If you encounter any installation or performance problems, please do not hesitate to contact us using the phone number listed on the back cover of the booklet.

Upon receiving your product please open all cartons carefully and inspect for any manufacturing defects or transit damage.



FIRED EARTH cannot be held responsible for damaged products after or during their installation.

This installation guide and the fixings provided are intended for fixing into solid walls. If you are installing this product into a stud wall structure or any other type of non solid wall please amend your installation techniques and fixings accordingly.

#### Tools Required



## **Atlantic Cabinet**



Ensure that you have a clear space within which to work.

FIRED EARTH recommends the guidance of a qualified plumber in the installation process.

Always observe the plumbing and building regulations in the area the product is being installed in.


#### Optional feet



Fitting of the optional feet should be undertaken before the unit is affixed to the wall

- With the unit laid on its back, apply a sufficient quantity of wood glue to the top surface of the leg, and inside the dowel holes (of the leg and base).
- Insert a dowel into each of the holes and insert the assembly into the base
  of the unit, using a mallet if necessary to very gently tap the leg into place.
- Ensure the legs are sitting square to each other and the unit, and then use a damp rag to remove any excess glue from around the joint.
- Allow this adequate time to dry (this time will be dependant on the glue used and will be specified by the manufacturer).
- Once the legs are affixed, continue with the installation as described below. Take care not to knock the legs as this may weaken the joint.

#### Technical specification

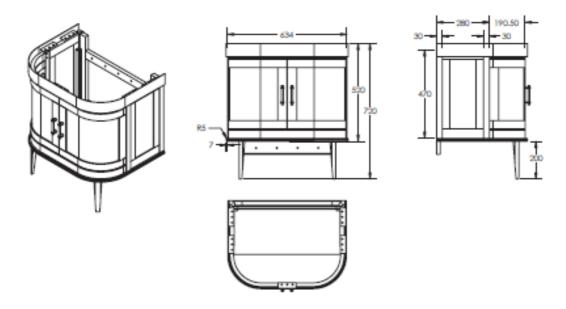


3 of 8


#### **Atlantic Cabinet**

#### Wall-hung vanity units

- · Prior to installation ensure all necessary pipework and plumbing is carried out.
- Check wall for level.
- Measure the distances between hole centres along the rear top rail of the unit, as well as the load supporting batten under the base. Using these measurements, mark up the wall where holes will need to be drilled - taking care to position the unit so that fixings will secure into brick and not mortar (this is crucial to ensure a solid and secure installation).



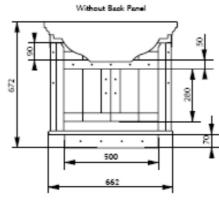

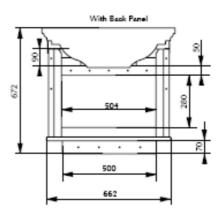



# Prior to drilling check for hidden cables & pipes

- Check all holes are marked up in the correct location.
- Drill all necessary holes and insert wall plugs.
- Support the unit from underneath and offer it up to the wall. Secure all fixings through the unit and into the wall, ensuring all connections are tight and firm.
- Carefully locate the basin onto the unit and follow the instructions provided with the basin in order to secure it to the wall (only applicable to the Carlyon furniture unit).
- Seal the rear of the basin to the wall using a small bead of silicon sealant.
- You are now free to connect all plumbing fixtures to the basin (taps, waste etc.)

This completes the installation of the vanity unit.

#### **Atlantic Cabinet**


#### Fitting onto a stud wall

When installing our wall hung furniture units into a stud wall it is necessary to add additional support in order to ensure the unit can be securely and safely installed.

Install the wall bracing at a minimum of 2x6" and the width of the unit ensuring that there are an adequate number of stud beams to anchor the bracing.

Mark the centre line and continue to finish the wall as required. Mount the unit using suitable fixings for your wall type.

To ensure that the unit can meet strict load performance targets is important that the bottom batten of the unit is utilised, and therefore the addition of an extra horizontal beam between studs will be required.

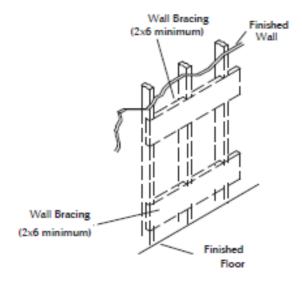




FIRED EARTH strongly recommends to mount the unit using the wall bracing method. The furniture unit is tested to withstand a maximum load in line with guidance set by European standards.



If the furniture is fixed using a basin frame FIRED EARTH cannot guarantee the load bearing capacity of the unit.

# **Atlantic Cabinet**

## Door hinge adjustment

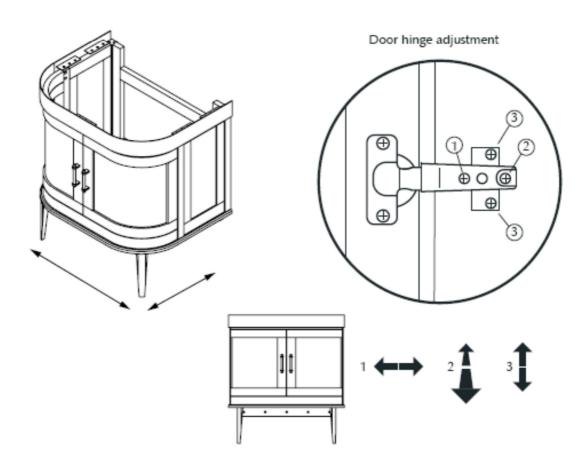

In order to adjust the hinge/door positioning, screws 1, 2, and 3 must be adjusted. When looking at the front of the unit;

- Adjusting screw 1 moves the door left and right
- Adjusting screw 2 moves the door forwards and backwards
- Adjusting screw 3 allows the door to move up and down

# **PRODUCT INFORMATION**

**FIRED EARTH** 

Bathrooms Leila Roberts

#### **Atlantic Cabinet**

#### Care & Maintenance

# FIRED EARTH

You have just acquired a high quality and expensive piece of furniture and are about to put it in the most hostile environment in the house! We have been producing these fine products for many years and our experience is that they will give years of pleasurable service if a few simple measures are taken to look after them.

#### Ceramic:

The glazed finish of your sanitary ware should be cleaned after use by applying a little cream type cleaner. Apply using a sponge or damp cloth and rinse thoroughly with clean water. Cleaners containing abrasive materials should be avoided.

#### Metal:

Parts with Chrome/Cold finish should be cleaned with a damp soft cloth only. The use of detergents and abrasive cleaning agents should be avoided as these will cause damage to the finish of the metal.

#### Wood:

Bathroom furniture can be wiped over using a damp cloth and dried with a soft duster. The use of polishes using silicon or any abrasive materials can damage the wood finish. Natural wax polishes should be used sparingly and applied using a soft dry cloth.

Always use your best efforts to keep the wood surface dry. The finish will deteriorate and the underlying timber could become permanently stained if subjected to long term contact with water.

# **PRODUCT INFORMATION**

**FIRED EARTH** 

Bathrooms Leila Roberts

#### **Atlantic Cabinet**

# **Warehouse Description**

#### **Packaging**

Net Weight: 28.02Kg

Gross Weight: 29.02Kg

No. of boxes per product code: 1

Dimensions of outers: 775x590x670mm

How many inners per outer: 0

Dimensions of inner: N/a

Agreed packaging standard: 5mm Double corrugated cardboard, brown with Fired Earth printing

Label specification:







Fired Earth Code: ATLCAB...